



AQ-RO3-RM


Under Sink Water Filter Remineralizer

REPLACEMENT

Owner's Manual
For use with AQ-RO-3

INSTALLATION STEPS

- 1 Remove the remineralizer** from the packaging
- 2 Important: Make sure the system is not under pressure**, the RO tank is completely drained and the water supply line is shut off. You can drain the tank and release the pressure by shutting off the supply line & opening up the filter faucet until there is no longer any water coming out of the faucet.
- 3 Once the tank is completely drained** and the RO system is no longer under pressure, remove the 3/8 hose from the inlet and outlet of the remineralizer by pushing and holding down the white collar while pulling the hose out.
- 4 Discard the expired** remineralizer cartridge.

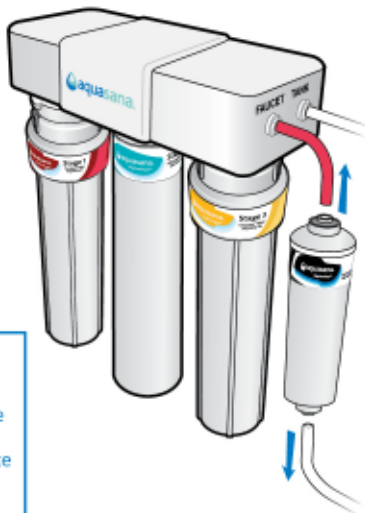


NOTE: Do not use with water that is microbiologically unsafe or of unknown water quality without adequate disinfection before or after the system.

- 5 Insert the white 3/8 hose** that is attached to the faucet into the outlet connection of the new remineralizer by pressing the hose in until it completely stops
- 6 Connect the remaining hose end** (which has the opposite end connected to the RO manifold outlet labeled "Faucet") to the inlet portion of the Remineralizer by pressing the hose in until it completely stops.
- 7 Shut off the filter faucet**, turn on the water supply and allow the RO tank to fill up completely (this may take around 2 hours).
- 8 Once the tank has completely filled**, inspect for leaks.

If there are no leaks, flush the 0 filter cartridges by opening up the RO faucet and allowing the water to run through the filters until there is no longer any pressure coming out of the RO faucet.

- 9 Close the RO faucet**, allow 2 hours for the pressure to build back up in the system and your RO system is ready to use.

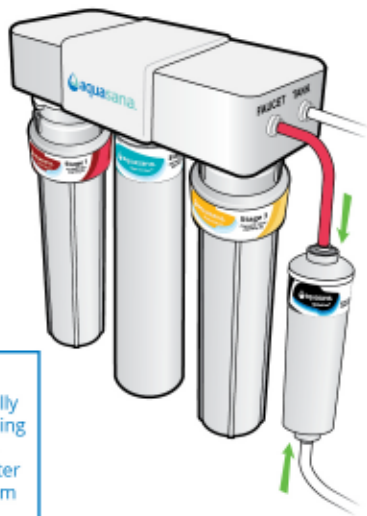

NOTE: For the first 36 hours after the initial installation, make sure to periodically inspect for leaks while the system is running and while it is turned off. If a leak occurs, shut off the water supply, open up the filter faucet to release pressure from the system & contact Aquasana Technical Support (866) 662-6885.



water for life[®]

**Protect your investment and save money
with our Water for Life program.**



**Extended
Warranty**



**Discounted
Replacements**



**Free
Shipping**



**No
Contract**

CONTACT US TO LEARN MORE 866-662-6885

waterforlife@aquasana.com



System WQA tested and certified to NSF/
ANSI Standards 42, 53, 58, and 401 for
the claims specified on the Performance
Data Sheet and at www.WQA.org.



For the full list of contaminants filtered,
scan to view the Performance Data Sheet on
Aquasana.com.

The recommended replacement frequency for the AQ-R03-RM is every 12 months.
Use only certified, genuine Aquasana replacement filters for continued contaminant removal
and system performance.

Aquasana, Inc.
6310 Midway Road
Haltom City, Texas 76117
866.662.6885 USA
877.332.7873 Canada
www.aquasana.com