

Whole House 20" Pre-filter Cartridge Replacement

Replace the pre-filter if there is a noticeable reduction of flow through the filter system, or if the pre-filter cartridge becomes heavily discolored.

Every 6 months. (Frequency may vary based on water quality and sediment levels)



How to change the pre-filter:

1. Shut off water to the system (A). Relieve water pressure in the pre-filter by slowly turning the pressure relief knob (B) counterclockwise until water stops running.
2. Place a bucket under the pre-filter to catch water. Remove the blue chamber by unscrewing it with the provided wrench.
3. If necessary, clean the inside of with mild soapy water, rinse and dry.
4. Place new filter in the center of the blue chamber.
5. Clean the housing o-ring and relubricate it with silicone grease. Seat the o-ring into the proper groove and reattach the housing by screwing back onto the top piece.
NOTE: DO NOT USE PETROLEUM JELLY as lubrication on the system or o-rings.
6. After reassembly, turn the water to the system back on by slowly opening the shutoff valve.
7. To remove air from the lines, run water with the bucket still under the pre-filter. Check for leaks.