



water for life®

**Protect your investment and save money  
with our Water for Life program.**



Extended  
Limited  
Warranty



Discounted  
Replacements



Free  
Shipping



No  
Contract

**CONTACT US TO LEARN MORE 866-275-2319**

[waterforlife@aquasana.com](mailto:waterforlife@aquasana.com)



System tested and certified by WQA to  
NSF/ANSI Standard 42, 53, and 401 when  
used in the AQ-5300 for the reduction of  
the claims specified on the Performance  
Data Sheet and at [www.WQA.org](http://www.WQA.org).



For the full list of  
contaminants filtered,  
scan to view the  
Performance Data Sheet  
on Aquasana.com.

The recommended replacement frequency for the AQ-5300R is every 6 months or 600 gallons of use.  
Use only certified, genuine Aquasana replacement filters for continued contaminant removal and  
system performance.

#### Aquasana, Inc.


6310 Midway Road  
Haltom City, Texas 76117  
866.662.6885 USA  
877.332.7873 Canada  
[www.aquasana.com](http://www.aquasana.com)

100362138


aq5300\_replace\_20231108

#### INSTALLATION STEPS

**1 Shut off the cold water valve** under the sink. Release the pressure from the system by turning on the dedicated faucet. Once there is no longer any water flowing, you can proceed with replacing the filters.

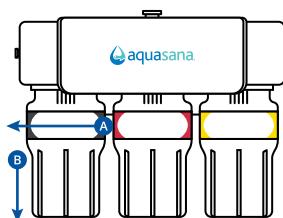

**2 Unbox filter replacements** and remove plastic. Each filter is color coded to match the circle indicator on each filter housing.

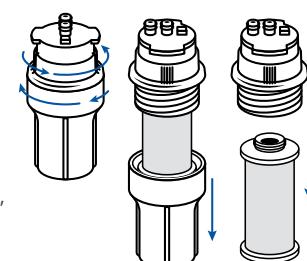

**3 Remove each filter housing** from the system manifold by turning the filter housing to the left. Pull down to detach. Ensure the filter housings are not on an angle while removing. This may result in damage to the o-ring.

**4 Holding the filter housing over the sink**, open it by turning the bottom counter-clockwise. Pour excess water down sink drain. Pull down on dirty filter to disconnect it from the filter housing. Continue this step for the second and third filter housing. While the housing is open, inspect each o-ring for damage. If damaged, replace immediately. If misaligned, gently move the o-ring into place.

**NOTE:** If filter housing is too tight to disconnect by hand, please use the plastic wrench included with original system.

**NOTE:** Must replace housing every 5 years or risk property damage from leaks.  
Call 866-662-6885 to order.

Do not use with water that is microbiologically unsafe or of unknown water quality without adequate disinfection before or after the system.

**aquasana**



AQ-5300R


#### Under Sink Water Filter Claryum® 3-Stage

#### REPLACEMENT

##### Owner's Manual


For use with AQ-5300

**5 Press new replacement filter** to the top of the filter housing using the appropriate color coded filters. Then, reconnect the bottom of the filter housing to the top half. Ensure connection points are correctly aligned, then turn clockwise to tighten. Continue this step for the second and third filter housing.

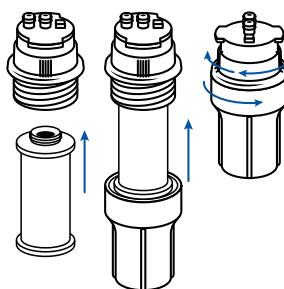


**NOTE:** Do not use tools to tighten. Hand tighten only.

**6 Reattach filter housings** to the bottom of the system manifold. Ensure connection points are correctly aligned, then push the filter housing up while turning clockwise. Continue this step for the second and third filter housing. Ensure all filter housings are locked in place, are not on an angle, and are aligned as pictured. Improper placement may result in damage to the o-ring or leakage.

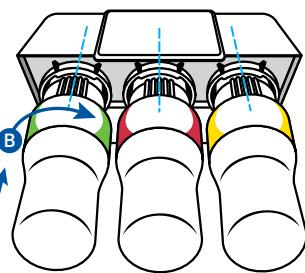

**7 Open battery door** and remove old battery. Insert new battery. When inserted correctly, system will beep five times and blink red.

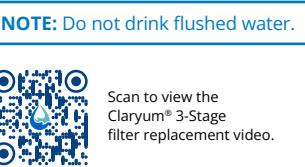

**NOTE:** Do not drink flushed water.

**8 Once all filter housings** have been replaced and reattached, slowly turn water valve on. Turn off faucet and inspect for leaks. Then, flush system for 10 minutes before drinking.

Scan to view the  
Claryum® 3-Stage  
filter replacement video.