aquasana active

THE CLEAN WATER MACHINE



Replacement Cartridge Instructions

for use with AQ-CWM-P-W, AQ-CWM-D-W, AQ-CWM-P-B, AQ-CWM-D-B, AQ-CWM-RB1, AQ-CWM-RB2, AQ-CWM-RB1W

Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

- **1.** Remove pitcher or dispenser from filtration dock.
- 2. With filtration dock facing forward, open top cover by rotating it a quarter-turn, counterclockwise, until the top cover lifts off the filtration dock. (figure A)
- **3.** Remove used cartridge from top cover by pulling down on the cartridge or by removing it from the sump. (figure B)
- **4.** Drop the new filter cartridge into the opening on the dock with the o-rings facing up. (figure C)
- **5.** After dropping the cartridge into the dock opening you must push the reset button
- Rated capacity: 320 Gallons (1,211 Liters)

- located on the top of the dock; this will reset the lights on the system. (figure D) Next place the top cover on the dock, pressin
- 6. Next place the top cover on the dock, pressing firmly, rotate the top cover a quarter-turn clockwise until fully locked in. Ensure both tabs of the top cover are aligned with the dock. (figure D)
- Once the cartridge has been replaced and the top cover is fully locked into filtration dock, place pitcher or dispenser back onto filtration dock.
- **8.** Cartridge will need to be flushed 1 cycle to remove carbon fines. (1 pitcher or 1 dispenser)







