



# Under Sink Water Filter

## Claryum® 1-Stage

### Replacement Filter Instructions

For use with AQ-5100




1. Shut off the cold water valve under the sink. Release the pressure from the system by turning on the dedicated faucet. Once there is no longer any water flowing, you can proceed with replacing the filter. Unbox filter replacements and remove plastic

2. Remove the filter housing from the system manifold by turning the filter housing to the left. Pull down to detach. Ensure the filter housings are not on an angle while removing. This may result in damage to the o-ring.




3. Holding the filter housing over the sink, open it by turning the bottom counterclockwise. Pour excess water down sink drain. Pull down on dirty filter to disconnect it from the filter housing. While the housing is open, inspect the o-ring for damage. If damaged, replace immediately. If misaligned, gently move the o-ring into place.

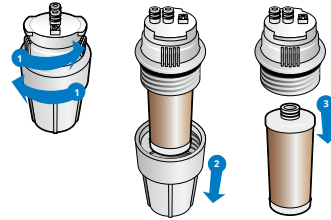

**NOTE:** If filter housing is too tight to disconnect by hand, please use the plastic wrench included with original system.


Must replace housing every 5 years or risk property damage from leaks. Call 866-662-6885 to order.

4. Press new replacement filter to the top of the filter housing. Then, reconnect the bottom of the filter housing to the top half. Ensure connection points are correctly aligned, then turn clockwise to tighten.

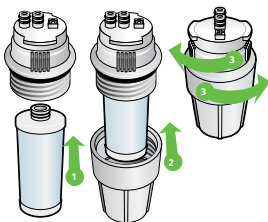

**NOTE:** Do not use tools to tighten. Hand tighten only.

5. Reattach filter housing to bottom of the system manifold. Ensure connection points are correctly aligned, then push the filter housing up while turning clockwise. Ensure filter housing is locked in place, not on an angle, and is aligned as pictured. Improper placement may result in damage to the o-ring or leakage.

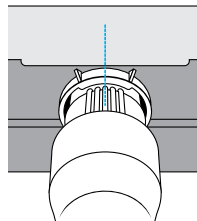

6. Once the filter housing has been replaced and reattached, slowly turn water valve on. Turn off faucet and inspect for leaks. Then, flush system for 10 minutes before drinking.

**NOTE:** Do not drink flushed water.



**NOTE:** Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.



Protect your investment and save money with our Water for Life program.



Extended Warranty



Discount Replacements



Free Shipping



No Contract

CONTACT US TO LEARN MORE [waterforlife@aquasana.com](mailto:waterforlife@aquasana.com)



Scan to view replacement video.



For the full list of contaminants filtered, scan to view the Performance Data Sheet on [Aquasana.com](http://Aquasana.com).



Certified by WQA to NSF/ANSI 42, 53, and 401 when used in AQ-5100 for the reduction of the claims specified on the Performance Data Sheet and at [www.WQA.org](http://www.WQA.org).

The recommended replacement frequency for the AQ-5100R is every 3 months or 200 gallons of use. Use only certified, genuine AquaSana replacement filters for continued contaminant removal and system performance. Conforms to NSF/ANSI 53 for VOC reduction. See Performance Data Sheet for individual contaminants and reduction performance.

AquaSana, Inc.  
6310 Midway Road  
Haltom City, Texas 76117  
USA 866.662.6885 • CAN877.332.7873  
[www.aquasana.com](http://www.aquasana.com)