

# Protect your investment and save money with our Water for Life® program.







Discounted Replacements



h

Free Shipping

No Contract

### **CONTACT US TO LEARN MORE 866-662-6885**

waterforlife@aquasana.com





System tested and certified by WQA to NSF/ANSI Standards 42, 53, and 401 when used in AQ-4000 for the reduction of the claims specified on the Performance Data Sheet and at www.waa.org.



For the full list of contaminants filtered, scan to view the Performance Data Sheet on Aquasana.com.

The recommended replacement frequency for the AQ-4035 is every 6 months or 450 gallons of use. Use only certified, genuine Aquasana replacement filters for continued contaminant removal and system performance.

### Aquasana, Inc.

6310 Midway Road Haltom City, Texas 76117 866.662.6885 USA 877.332.7873 Canada www.aquasana.com

100372301

AQ-4035-OM-202301204





AQ-4035

Countertop Water Filter

## **Claryum® Countertop**


### **REPLACEMENT**

Owner's Manual For use with AQ-4000

#### **INSTALLATION STEPS**

- 1 Place unit in sink when replacing filters to catch excess water. Remove the threaded filter caps by turning in the direction of the arrows. To loosen, turn "A" cap to the right and "B" cap to the left.
- (2) Remove both filters and discard. While the system housing is open, inspect each o-ring for damage. If damaged, replace immediately. If misaligned, gently move the o-ring into place.
- **Unbox filter replacements** and remove plastic. First, insert the "A" filter with the nipple-end first. Then, press and rotate to lock in place. Install the "B" filter by inserting the nipple into the "B" cap.

4 Tighten both threaded filter caps by turning cap "A" to the left and cap "B" to the right.

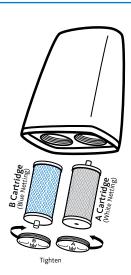

5 Once both caps have been replaced, slowly turn on the cold water. With the system lying flat, flush system for 10 minutes before drinking. During this time, check

before drinking. During this time, check for leaks. Once system is flushed and no leaks have been detected, return system to the upright position.

**NOTE:** Do not drink flushed water.

**NOTE:** Cartridges are inserted opposite of each other.

B

**NOTE:** Do not use with water that is microbiologically unsafe or of unknown water quality without adequate disinfection before or after the system.



**TIP:** To assist with "A" filter removal, you can use use the old "B" filter to twist "A" to release it from the housing.